 




User Manual

Hub Mini

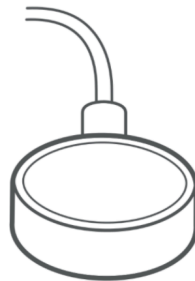

Contents

Getting started	1
Power	2
Internet connection	3
Pairing with Flic buttons & Flic Twist	4
Factory reset	5
Problems	6
Compliance	6
Safety usage guidelines	7
Warranty	8
Notice	9

Getting started

 


To get started make sure that you have the following:

1. An active internet connection (Ethernet or WiFi)
2. A phone with the Flic App installed
3. A Flic button, "Flic" or "Twist", within Bluetooth range of the Flic Hub Mini ("Hub Mini")

The phone is only necessary during the setup process. Once the setup is complete you no longer need the phone to enjoy Flic!

Power

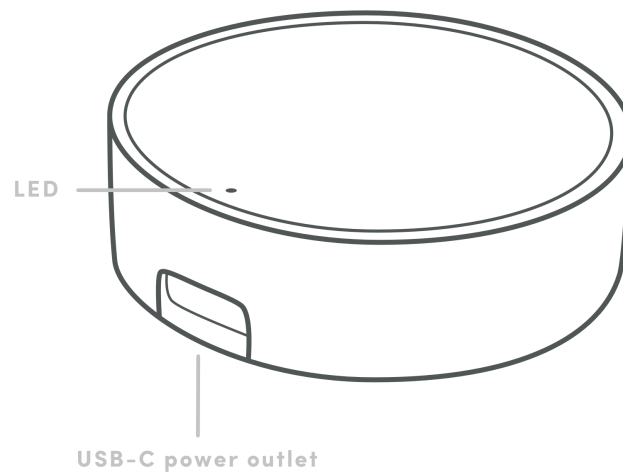

Connect the USB-C cable and an external power adapter to the Hub Mini. The Hub Mini will turn on, indicated by a bright red LED.

After approximately 15 seconds the LED will dim and become discoverable. Please follow the instructions in the app to complete the initial setup.

We recommend that you use an adapter with at least 1A output. An adapter with less than the recommended current rating may result in unstable behavior.

 
Internet Connection

To connect the Hub Mini to your WiFi network open the Flic App and follow the setup steps to get the Hub Mini connected to the internet.

If the Hub Mini doesn't have an active internet connection you will not be able to make use of all the available features.

To check if the internet connection for the Hub Mini is active you should open the Hub Mini settings page in the app. Look for the network settings section and press test.


Pairing your Flic Buttons & Twist

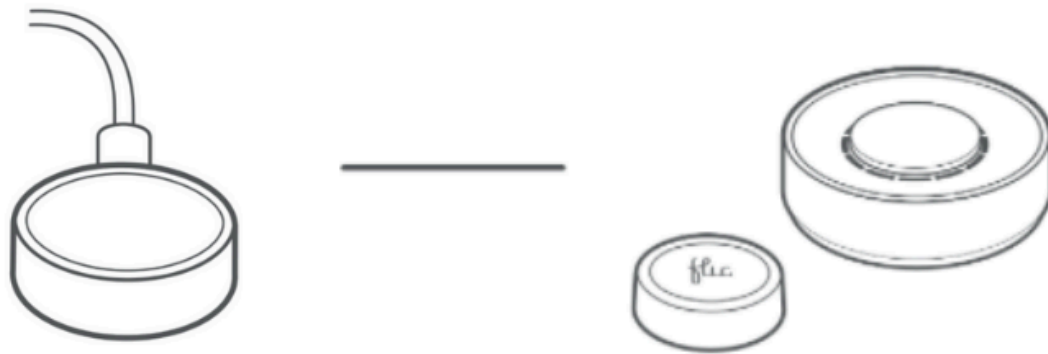

To pair a brand new Flic to the Hub Mini, simply tap the '+' button in the bottom right corner of the Hub Mini app page. Press and Hold the Flic button or Flic Twist and the pairing should only take a few seconds.

If you are pairing a Flic that was previously paired then you will need to remove it from that device first. You can do this by navigating to the app page of the Flic you want to remove, tapping the gear icon, and selecting the 'Remove' option. Now you can pair this button as described above.

 Factory reset

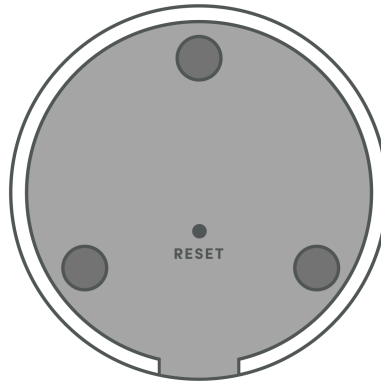

If, for any reason, you must perform a factory reset then follow the step by step below. NOTE that all your account settings will be deleted and the Hub Mini will return to default factory settings.

1. Unplug the power cable on your Hub Mini.
2. Use a needle or sim card pin to press and hold the Reset button.
3. Continue to hold the Reset button while plugging in the power.
4. After the light blinks green you can release the Reset button. This should take a few seconds. Please remember not to remove the power cable until it blinks green.

If you remove the Hub Mini from your account and reconnect to it then you will be prompted to use the Factory Password when pairing. This can be found on the label under your Hub Mini.

If during the initial setup, you assign your password and forget this then you must perform a factory reset to gain access again.

Problems

If you have any issues setting up or using the Flic products that are not answered here, please read FAQ's at <https://start.flic.io/faq>

Alternatively, you can contact us via support@shortcutlabs.com

Compliance

Shortcut Lab's declaration of conformity is available at <https://flic.io/doc>

For full compliance, list visit <https://flic.io/compliance>

Flic 2 and the Twist are certified as FCC, IC, CE, AUS, R-NZ and WEEE, RoHS, REACH compliant.

The Hub Mini is certified as FCC, IC, CE, AUS, R-NZ and WEEE, RoHS, REACH compliant.

Safety usage guidelines

The Hub Mini is not a toy. It contains small parts and accessories that present a choking hazard as such it is not suitable for children or pets.

General

- Do not attempt to service the product.
- Do not use the product in temperatures below -20°C or above +54 °C.
- Clean with a damp cloth only. Do not submerge and do not use chemical or abrasive cleaning products.

Flic specific

- Battery life will be shortened with heavy usage and/or use in extreme conditions.
- Flic is not waterproof. Do not submerge or attempt to use it underwater as this will result in irreversible damage that is outside the scope of the Shortcut

Labs AB warranty.

Warranty

Shortcut Labs AB warrants that your Flic hardware product (“the product”) will be free from defects in materials and workmanship for 24 months from the date of delivery to the original retail purchaser (“the warranty period”).

If a defect in the product arises within the warranty period, Shortcut Labs will, at its sole option and subject to applicable laws:

- (1) repair or replace it with a new or refurbished product or component, or
- (2) refund the original purchase price upon return of the defective product.

This warranty does not apply to products you purchase from unauthorized resellers, where the instructions for use and activation of the product are not complied with, or where the product is damaged as a result of abuse, accident, modification, moisture, or other causes beyond our reasonable control.

Note: Battery usage is regarded as normal wear and tear and is therefore not covered by the 24-month warranty.

For detailed warranty information visit:

<https://flic.io/documents/warranty-police>

Notice

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Caution

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Radio Frequency (RF) Exposure Warning

This equipment must be installed and operated by provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Canada, Industry Canada (IC) Notices

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Canada, avis d'Industry Canada (IC)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radio Frequency (RF) Exposure Information

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner that the potential for human contact during regular operation is minimized. This device has also been evaluated and shown compliant with the IC RF Exposure limits under mobile exposure conditions (antennas are greater than 20 cm from a person's body).

Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industrie Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal.

Ce périphérique a également été évalué et démontré conforme aux limites d'exposition aux RF d'IC dans des conditions d'exposition à des appareils mobiles (antennes supérieures à 20 cm à partir du corps d'une personne).



Join us! <https://community.flic.io/>

Share your ideas with other Flic users and keep up to date with the latest news and happenings from the Flic team.

Shortcut Labs AB, Drottning Kristinas Väg 41, 11428, Stockholm, Sweden